



## Arista – Bathroom Accessories

### New Quick-Fit Mounting Design

Congratulations for purchasing Arista *New Quick-Fit Mounting design* quality Bathroom Accessories. We thank you for purchase of our Towel Bar (either 18” or 24”), Towel Ring, Tissue Paper Holder and/or Robe Hook!

This is a general Installation Instruction Manual which will apply for the different Arista *New Quick-Fit Mounting design* bath accessory products you have purchased. Following the below step-by-step instructions will guide you through the easy installation in minutes!

### EASY INSTALLATION – By just Clicking in a Second !

(Easy-to-Use Universal Mounting Template & Mounting Hardware Included)

A Universal Mounting Template sheet is provided, which has the marked positions for the Towel Bar, Towel Ring, Tissue Paper Holder (with either Single Bracket or 2-Bracket design), Robe Hook, whichever will apply.

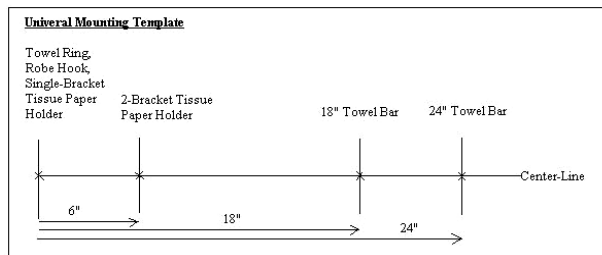


Fig.1

1. According to the different products you are going to install, check the corresponding mounting length needed as indicated on the Universal Mounting Template sheet.

Tape the required part of the template sheet on to the wall at the desired location, Fig. 1. Check

the “Center-Line” on the template is level on the wall. Place the Quick-Mount design mounting plate(s), Fig. 3, vertically at the corresponding location(s) along the Center-Line on the template, with the upper & lower screw holes evenly distributed above & below the Center-Line and with the spring-pin on the lower side. Then, mark the screw locations along the vertical line on the template, through the upper & lower holes at the mounting plate.

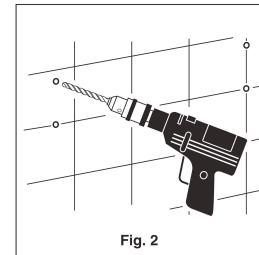


Fig. 2

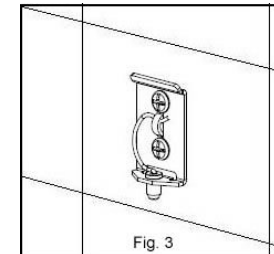


Fig. 3

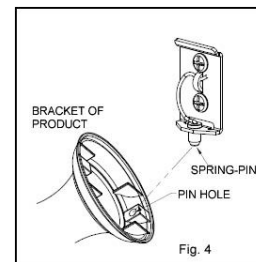


Fig. 4

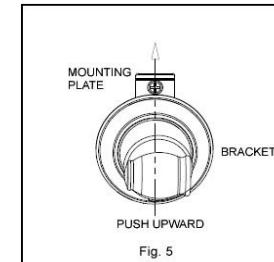


Fig. 5

2. Take away the mounting plate after marking is done. Start to drill holes at the marked screw locations, Fig.2.

On ceramic tiles wall, always try to locate the mounting hole location(s) on the grout line. If un-avoidably mounting on tile surface is needed, use masking tape to facilitate easier marking and to prevent sliding during drilling. Use 1/4” diameter carbide drill bit for drilling the holes.

3. Push the plastic anchors provided into the holes until flush with the wall. Then, screw the mounting plates to the wall with the screws provided, Fig. 3. Do not over-tighten the screws.

Note : Molly or toggle bolts may be required for hollow wall. (not included)

4. At last, mount the product by just clipping the product's Bracket over the mounting plate with detail as below. No further screwing is needed.

~ Firstly, orientate the bracket with the pin hole on the bottom side. Match the bottom pin hole of the bracket with the spring-pin of mounting plate, Fig. 4.

~ Then, push the bracket upward against the spring-pin until the upper side of the bracket clips with the top of the mounting plate, Fig. 5.

The mounting of product is finished when the clipping is done !

For product with two Brackets such as towel bars & some of the tissue paper holders, suggest to mount one Bracket first. Then, put the bar of the towel bar or tissue paper holder in place and finish the mounting of the other Bracket.

After assembly is finished, suggest to pull the product slightly to check if proper locking is done. Otherwise, please repeat the clipping step again.

For un-installation, the bracket could be simply detached from the mounting plate by just pushing the spring-pin upward with any small tool through the bottom pin hole of bracket and unclipping.

#### Care instruction

Use damp cloth, with mild cleaning solution if needed, to gently clean this product. Rinse and wipe dry with soft cloth. Harsh or abrasive solution may damage the product's surface finishing.

WT International Inc.  
1-888-635-0007  
sales@wtimfg.com

Arista™ is a trademark of WT International Inc.

#### **Limited Lifetime Warranty**

WTI, Inc. /Arista Branded product warrants that its products are free from manufacturing defects and comply with specifications for such products. The limited warranty period for this product shall be for the lifetime of the original purchaser. Within that time, WTI, Inc. will provide free replacement of any part that is proven defective due to manufacturing defect after inspection by WTI, Inc. In order to obtain performance of this warranty, please ship the product prepaid, along with proof of purchase to: WTI Inc., 555 Northland Dr., Building C, Rockford, MI 49341. This is the exclusive remedy for any and all warranty and other claims. WTI warranty obligation shall in all cases be limited solely to the replacement of equipment or parts found defective in material or workmanship within the warranty period. .

This Limited Warranty does not apply to any of the following:

Damage caused by accident, misuse or negligence, including improper installation, operation and maintenance, normal wear and tear, damage caused by a use or application or a purpose for which the product was not designed, or damage caused by alterations or repairs that have, in WTI's judgment, adversely affected its performance or reliability.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER GUARANTEES AND WARRANTIES, EXPRESSED OR IMPLIED. WTI MAKES NO OTHER EXPRESS OR IMPLIED REPRESENTATION OR WARRANTY OF ANY KIND, WHETHER AS TO MERCHANTABILITY FITNESS FOR A PARTICULAR PURPOSE OR USE, OR ANY OTHER MATTER. WTI SHALL NOT BE RESPONSIBLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG IMPLIED WARRANTY LASTS, SO THE ABOVE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH VARY FROM STATE TO STATE.